

CAN1

brown connector 32PIN
blue pin16 CANL


grey pin32 CANH
brown connector 32PIN

Information for car owner:
before using the remote "trunk open"
switch you need to disarm the alarm

LEFT BLINKER
brown connector 46PIN
blue pin32

RIGHT BLINKER
brown connector 46PIN
blue/red pin33

trunk servo-motor
brown connector 46PIN
white/green pin46

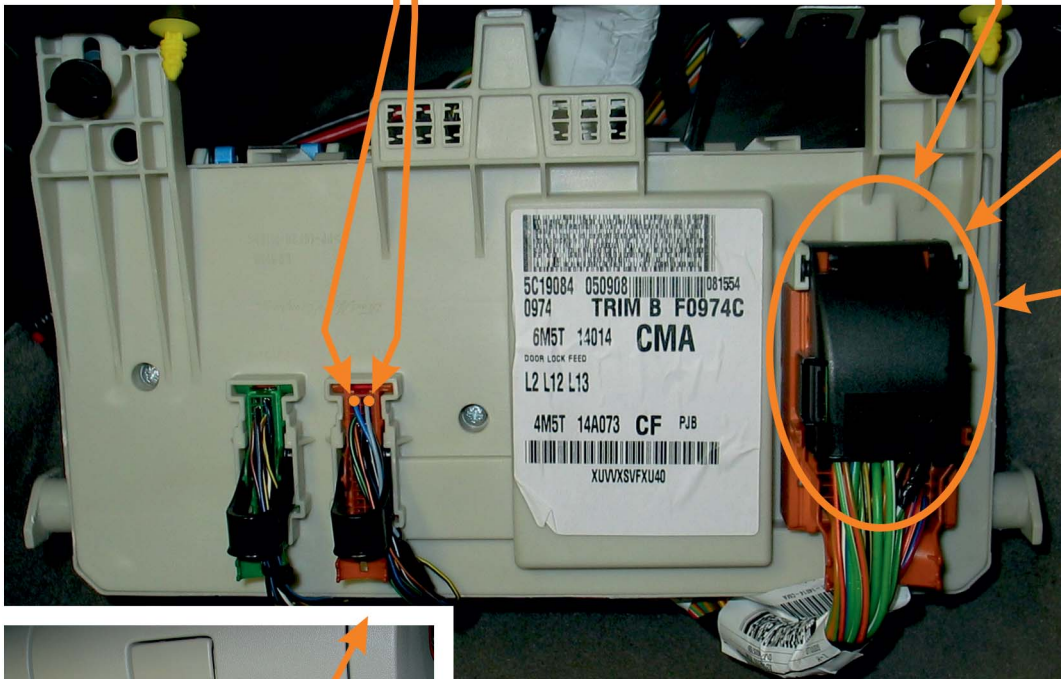

MODULE (under glove compartment - passenger's side)

