

Information for car owner:  
before using the remote "trunk open"  
switch you need to disarm the alarm

**CAN1**


green connector 76PIN  
grey/orange pin49 CANH

purple/orange pin50 CANL  
green connector 76PIN

yellow-brown pin71  
brown connector 76PIN  
(trunk servo-motor)

+12V red wire

(blinkers sequence steering  
- emergency light switch)  
blue 76PIN connector  
**brown/yellow pin8**

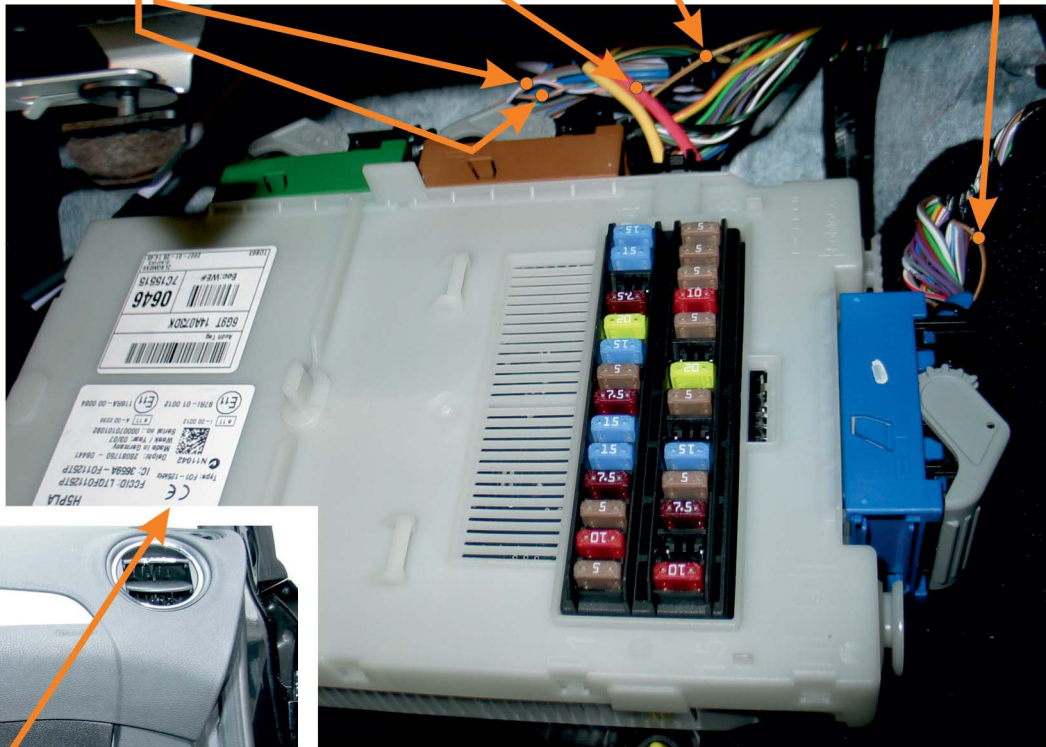

**MODULE** (under glove  
compartment - passenger's side)

