

Information for car owner:
before using the remote "trunk open"
switch you need to disarm the alarm



CAN1

green connector 76PIN
grey/orange pin49 CANH
purple/orange pin50 CANL
green connector 76PIN

yellow-brown pin71
brown connector 76PIN
(trunk servo-motor)

+12V red wire

(blinkers sequence steering
- emergency light switch)
blue 76PIN connector
brown/yellow pin8

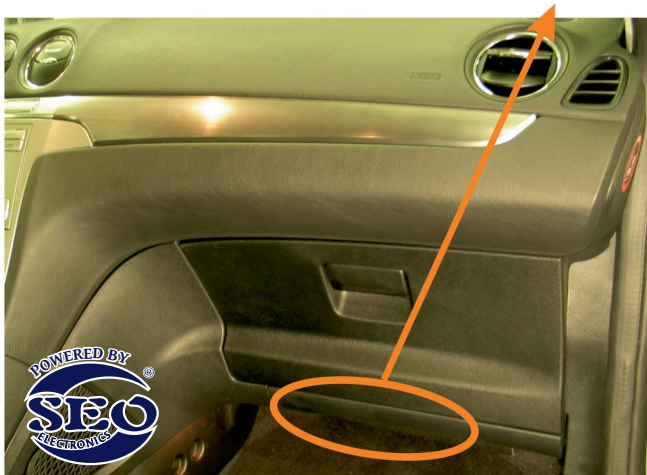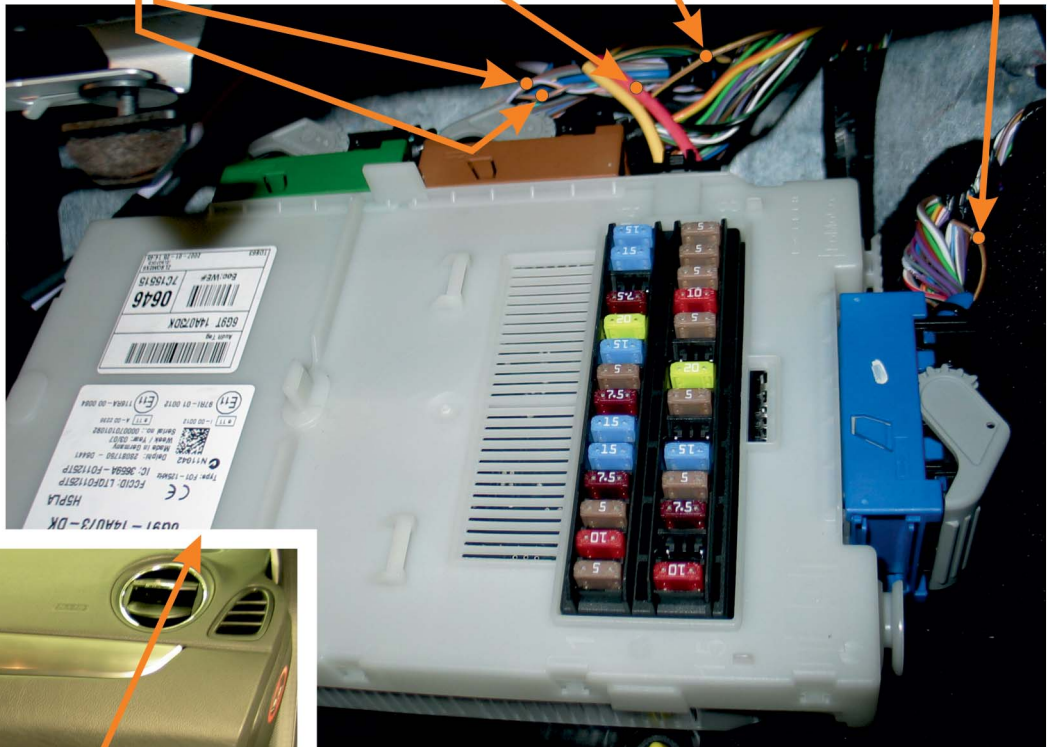

MODULE (under glove
compartment - passenger's side)

