

CAN1


white connector 26PIN
blue/black pin13 CANH

green/black pin12 CANL
white connector 26PIN


white/orange pin2
white connector 22PIN
(blinkers sequence steering
- emergency light switch)

DOOR SENSOR
white connector 16PIN
grey/orange pin6

Information to car owner:
before using the "trunk opening" remote
switch, you need to disarm the alarm

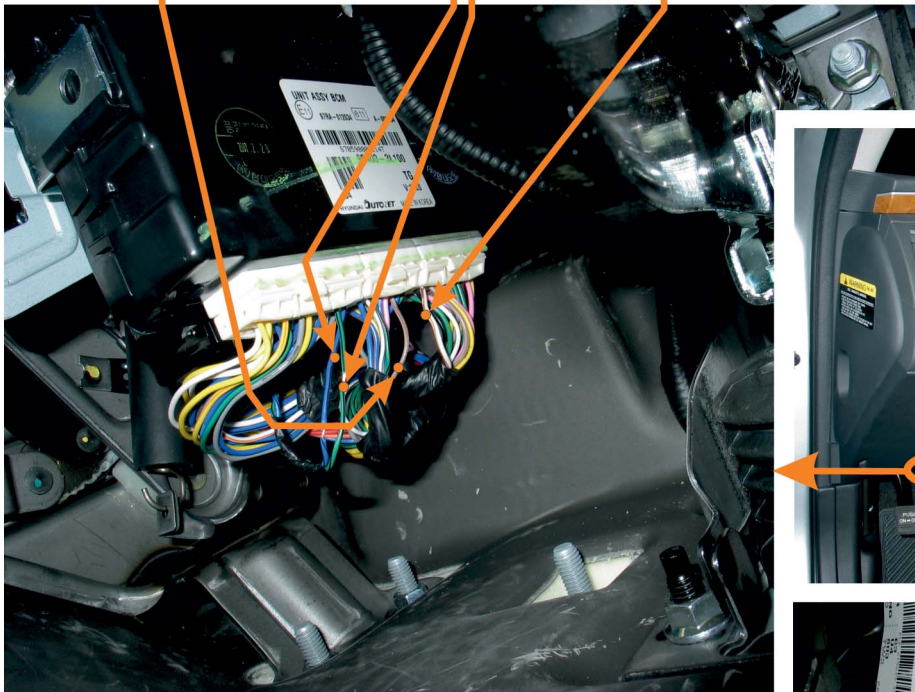

BCM MODULE

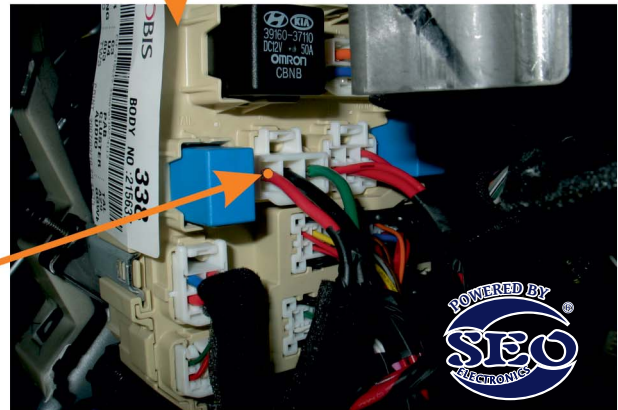

+12V red pin1
white connector 3PIN on fuse box