

yellow-black pin10
white connector on the back of the module 16PIN
(blinkers sequence steering)

CAN1

white connector 16PIN
white pin6 CANL
black pin5 CANH
white connector 16PIN

CAN2


white connector 16PIN
white pin4 CANH
red pin3 CANL
white connector 16PIN

← or →

CAN2

diagnostic connector 16PIN
white pin6 CANH
red pin14 CANH
diagnostic connector 16PIN

or

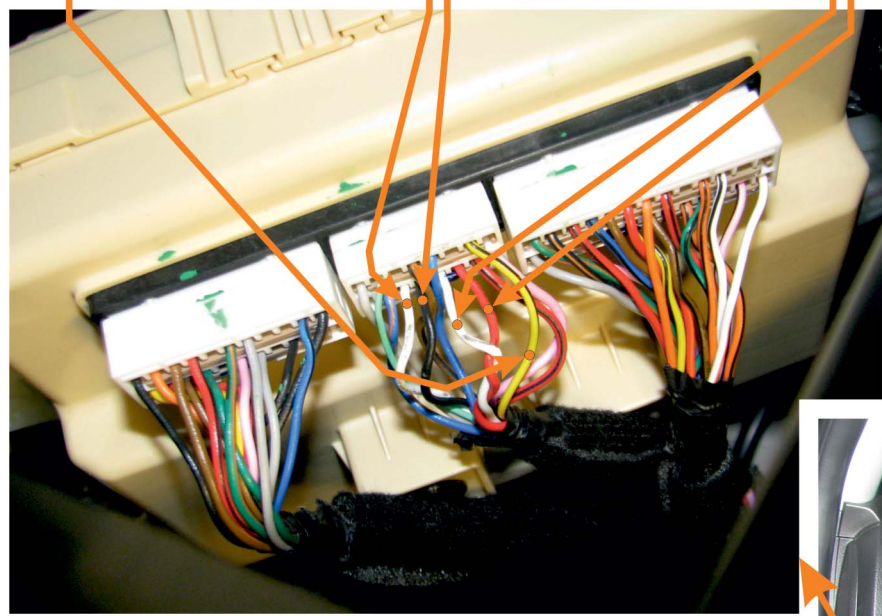

JUNCTION BOX (REAR)

