

CAN2

yellow connector 32PIN
white pin6 CANL
or diagnostic connector **PIN14**

green pin5 CANH
yellow connector 32PIN
or diagnostic connector **PIN6**

CAN1



or



CAN1

green pin4 CANH
yellow connector 32PIN
or diagnostic connector **PIN1**



do not connect

or

do not connect

green pin42 CANH
black connector 78PIN

green/white pin61
black connector 78PIN
(blinkers sequence steering
- emergency light switch)

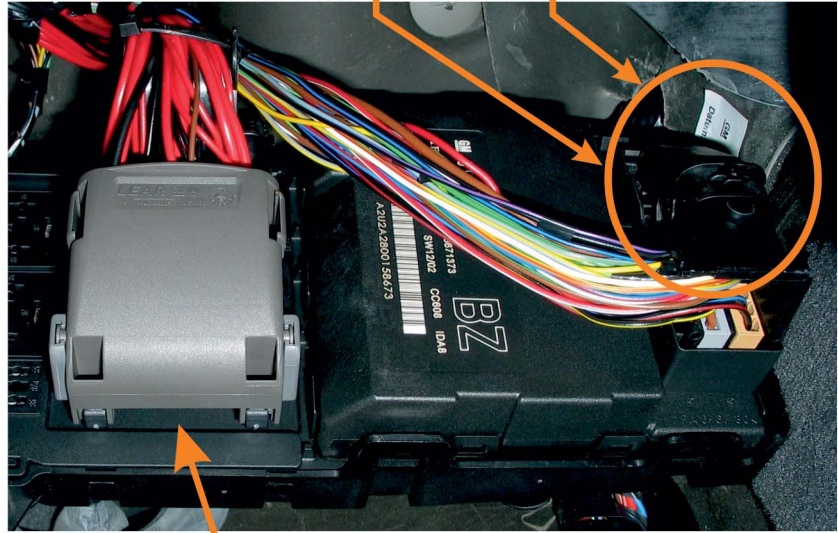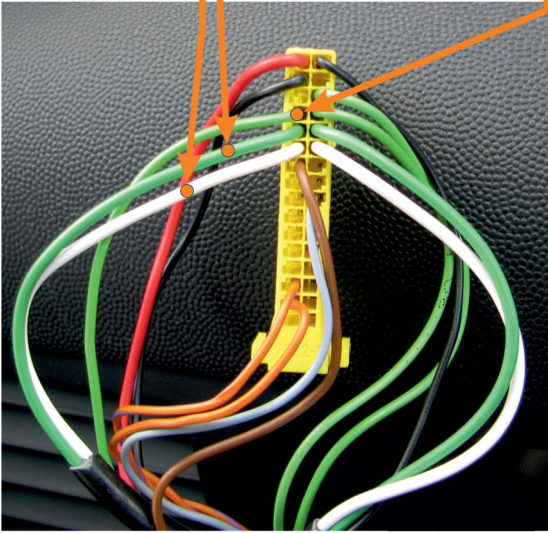

CONTROLLER MODULE



Additional information:
+12V - red pin15 grey connector 42PIN
IGNITION SWITCH - black pin11 grey connector 42PIN