

Information for car owner:
before using the remote "trunk open"
switch you need to disarm the alarm

CAN1

blue connector 32PIN
orange-black pin28 CANH
orange-brown pin29 CANL
blue connector 32PIN

(blinkers sequence steering
- emergency light switch)
black connector 16PIN
white/blue pin2

