


CAN1

brown connector 32PIN
blue pin16 CANL
grey pin32 CANH
brown connector 32PIN

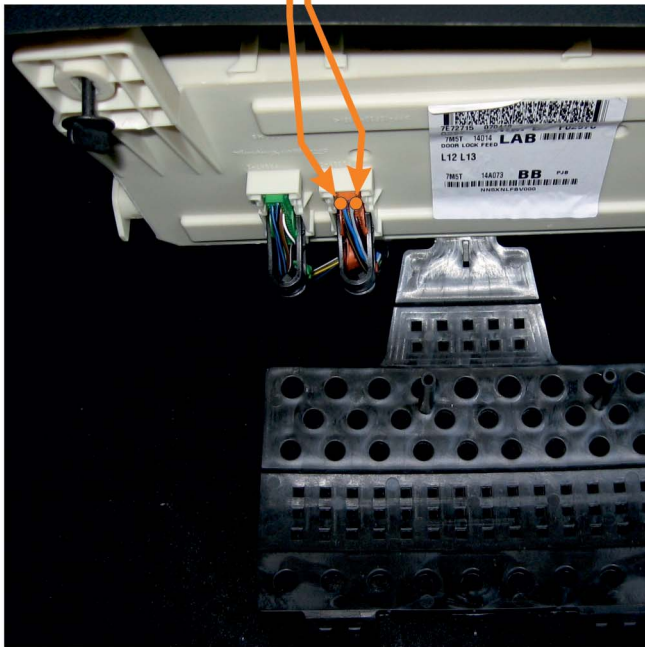

MODULE FRONT
(under glove compartment
- passenger's side)

Information for car owner:
before using the remote "trunk open"
switch you need to disarm the alarm

white/green pin46
brown connector 46PIN
(trunk servo-motor)

LEFT BLINKER
brown connector 46PIN
blue pin32

RIGHT BLINKER
brown connector 46PIN
blue/red pin33

