

**CAN1**

brown connector 32PIN  
**blue pin16 CANL**  
grey pin32 CANH  
brown connector 32PIN




**MODULE FRONT**  
(under glove compartment  
- passenger's side)

Information for car owner:  
before using the remote "trunk open"  
switch you need to disarm the alarm

**white/green pin46**  
brown connector 46PIN  
(trunk servo-motor)

**LEFT BLINKER**  
brown connector 46PIN  
**blue pin32**

**RIGHT BLINKER**  
brown connector 46PIN  
**blue/red pin33**

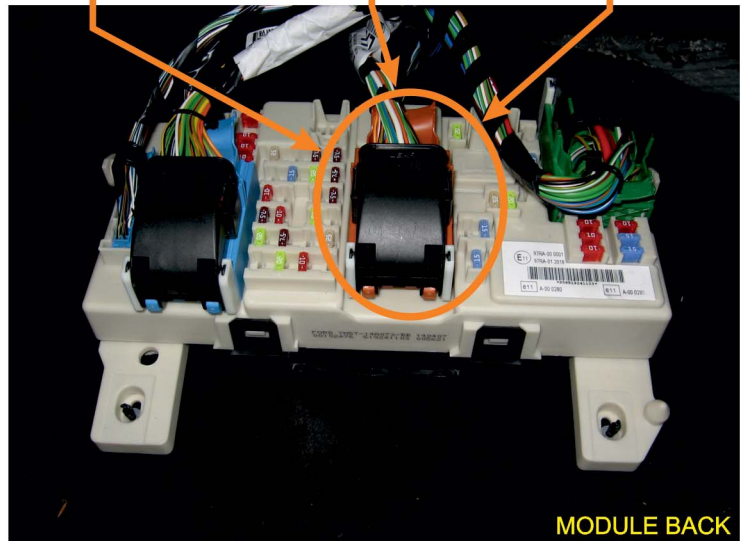

**MODULE BACK**

