

**CAN2**


connector diagnostic  
**white pin14 CANL**

**white/blue pin6 CANH**  
connector diagnostic

**CAN1**

connector diagnostic  
**grey/orange pin3 CANH**

**purple/orange pin11 CANL**  
connector diagnostic

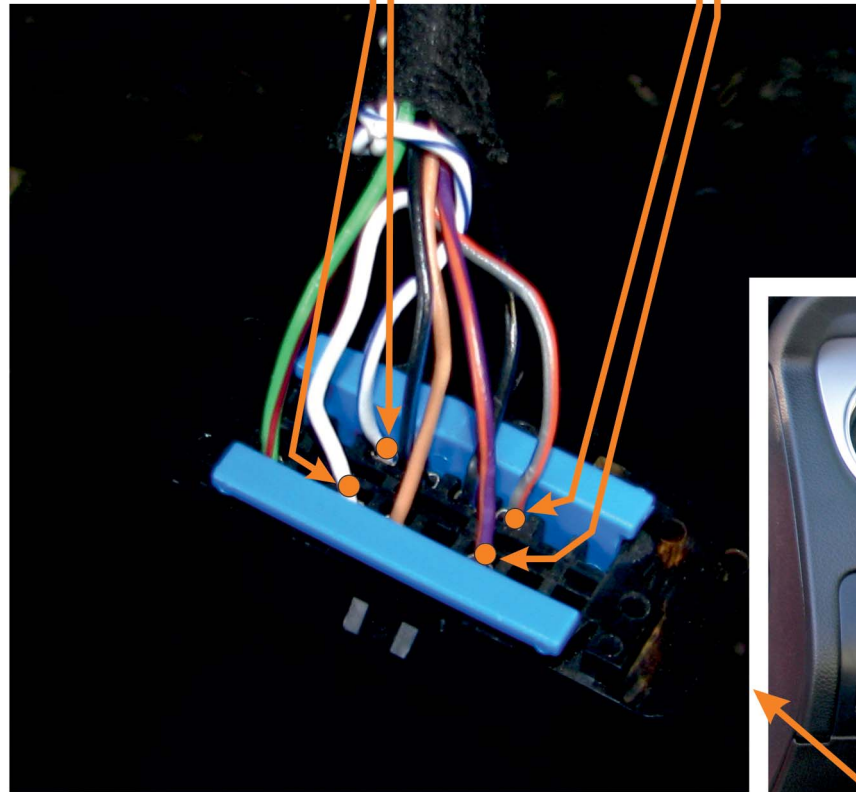

Information for car owner:  
before using the remote "trunk open"  
switch you need to disarm the alarm

