



CAN2

diagnostic connector
white pin14 CANL
white/blue pin6 CANH
diagnostic connector

CAN1

diagnostic connector
grey/orange pin3 CANH
purple/orange pin11 CANL
diagnostic connector

(alternative control blinkers
- emergency light switch)
black connector 8PIN
brown/yellow pin8

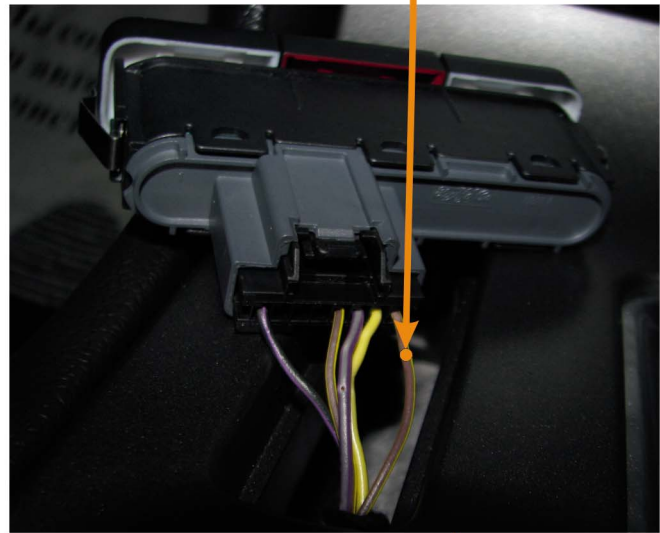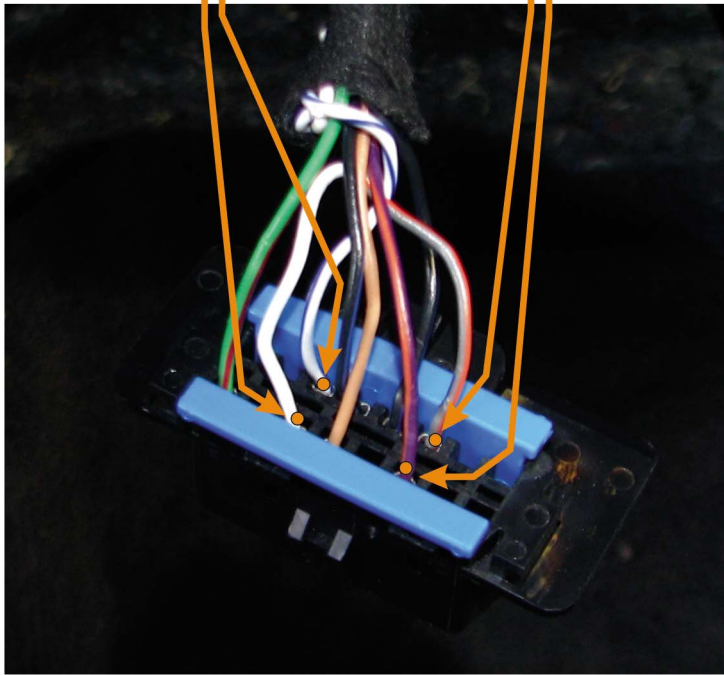

Information for car owner:
before using the remote "trunk open"
switch you need to disarm the alarm

