


CAN1

green connector 76PIN
purple/orange pin31 CANL
grey/orange pin30 CANH
green connector 76PIN

(alternative control blinkers
- emergency light switch)
blue connector 76PIN
brown/yellow pin17

yellow-brown
brown connector
(trunk servo-motor)

Information for car owner:
before using the remote "trunk open"
switch you need to disarm the alarm

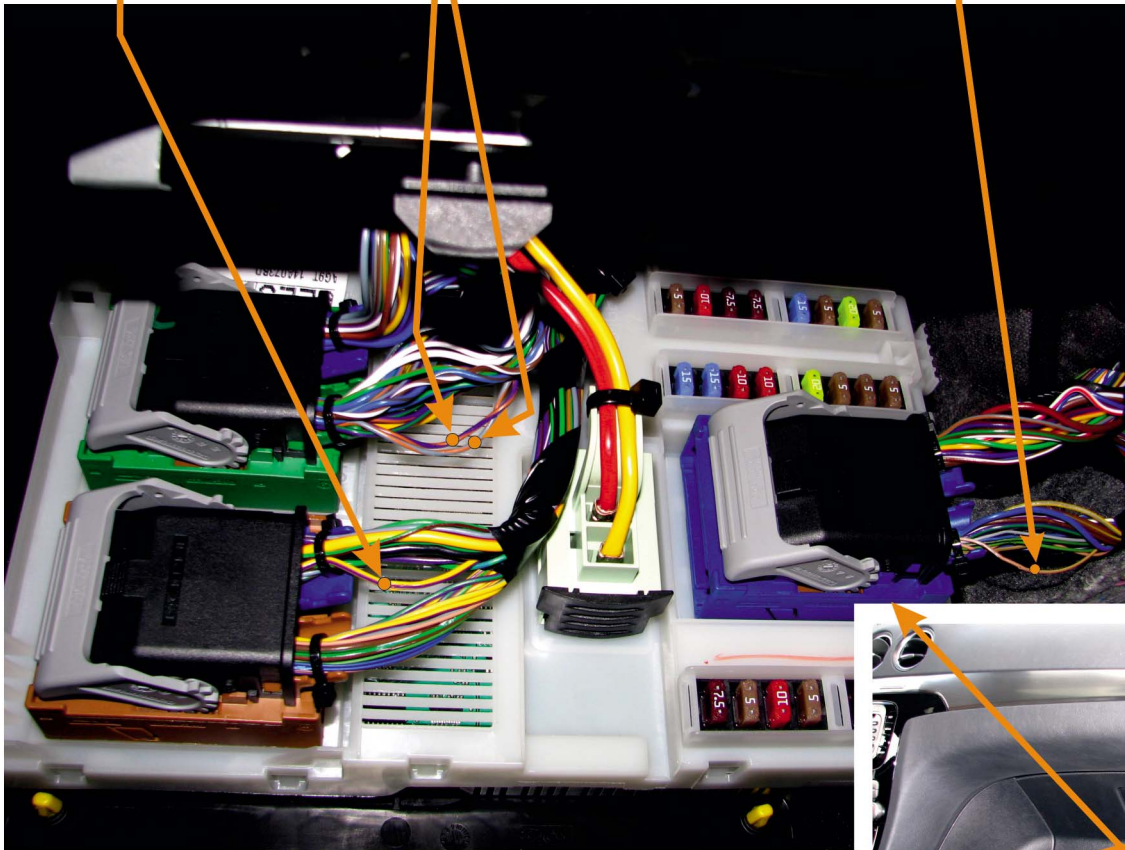

MODULE (under glove compartment - passenger's side)

