

CAN1 ← or → CAN1

diagnostic connector
pink pin14 CANL
blue pin6 CANH
diagnostic connector

or



black connector
blue pin20 CANH
pink pin19 CANL
black connector

Information for car owner:
before using the remote "trunk open" switch
you need to disarm the alarm

RIGHT BLINKER
brown white connector

LEFT BLINKER
white white connector

+12V white
black connector

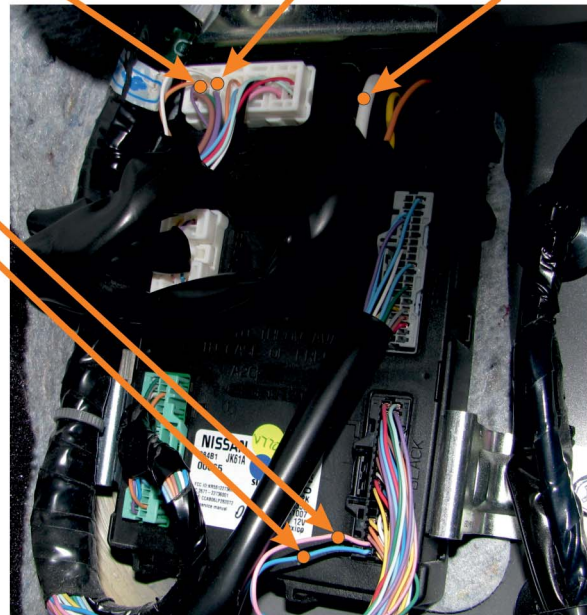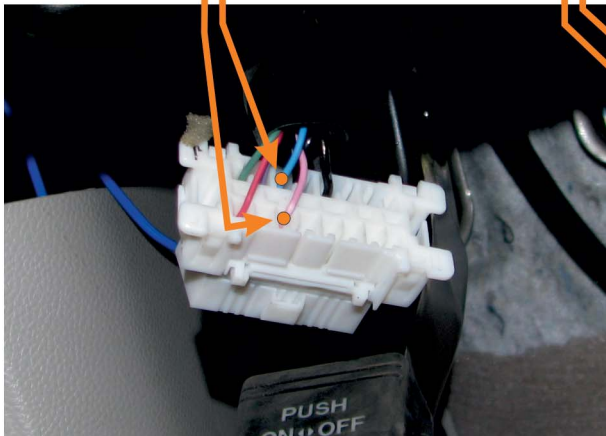

POWERED BY
SEO
ELECTRONICS