CAN1 ← CAN1 or


or

green/red pin32 white connector 40PIN (blinkers sequence steering - emergency light switch)


white connector 40PIN pink pin21 CANL blue pin22 CANH white connector 40PIN

diagnostic connector blue pin6 CANH

pink pin14 CANL diagnostic connector

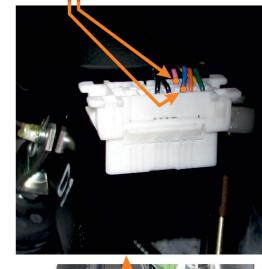



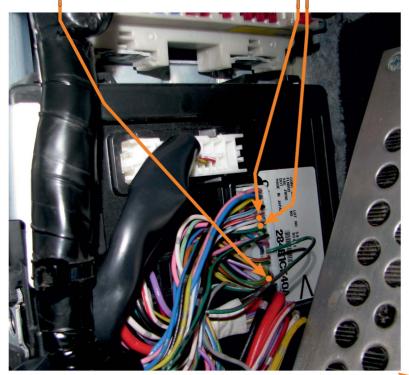

Information for car owner: before using the remote "trunk open" switch you need to disarm the alarm