


CAN1

diagnostic connector
pink pin14 CANL

blue pin6 CANH
diagnostic connector

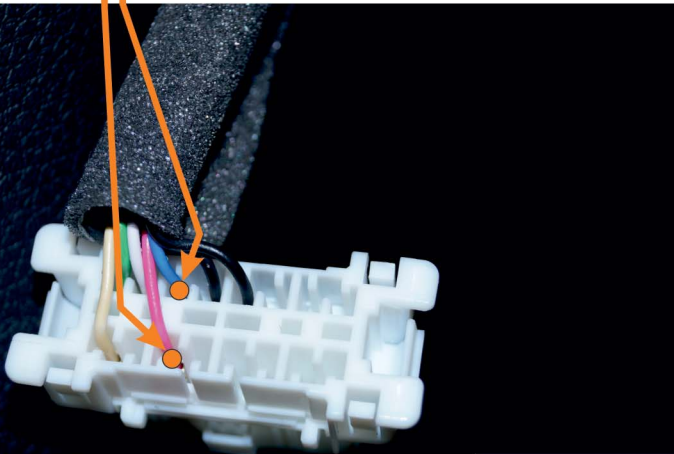

Information for car owner:
before using the pilot "trunk open"
switch you need to disarm the alarm