


Information for car owner:
before using the remote "trunk open"
switch you need to disarm the alarm

CAN1

connector 70PIN on module
green pin14 CANH

white pin5 CANL
connector 70PIN on module

red/blue pin3
connector 70PIN on module
(blinkers sequence steering
- emergency light switch)

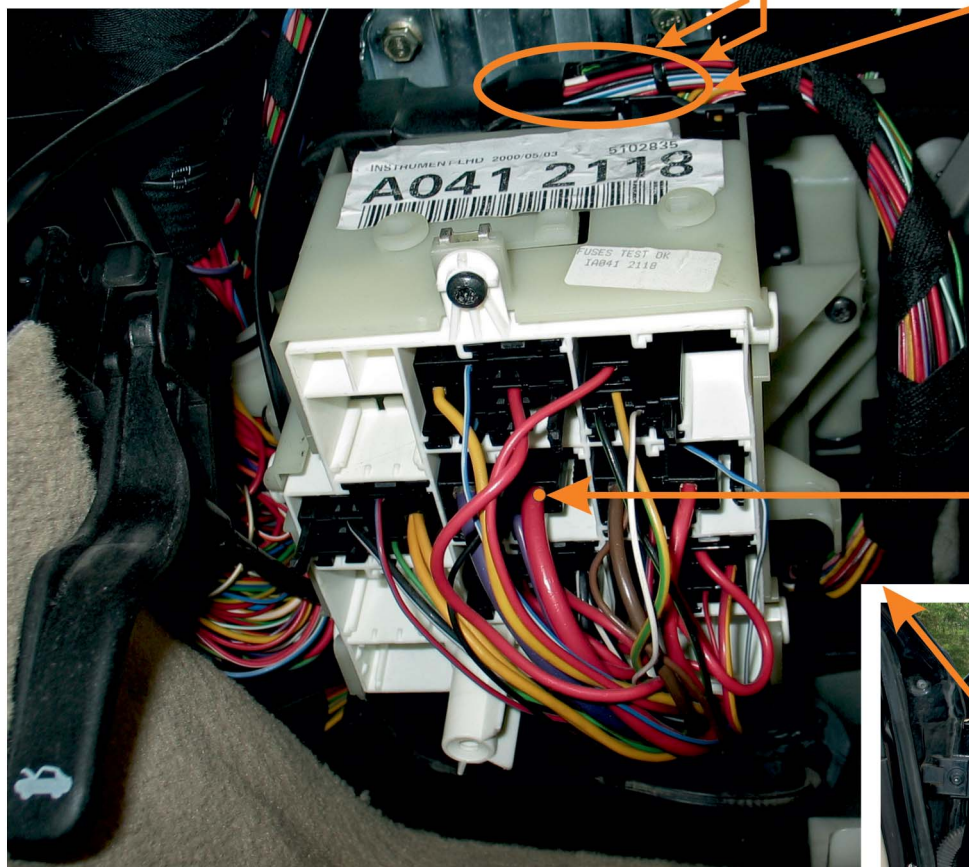

+12V

