

**CAN2**

yellow connector 32PIN  
**white pin6 CANL**  
or diagnostic connector **PIN14**

**green pin5 CANH**  
yellow connector 32PIN  
or diagnostic connector **PIN6**

**CAN1**

**green pin4 CANH**  
yellow connector 32PIN  
or diagnostic connector **PIN1**

**do not connect**



or

**CAN1**

**do not connect**

**green pin42 CANH**  
black connector 78PIN

**green/white pin61**  
black connector 78PIN  
(blinkers sequence steering  
- emergency light switch)

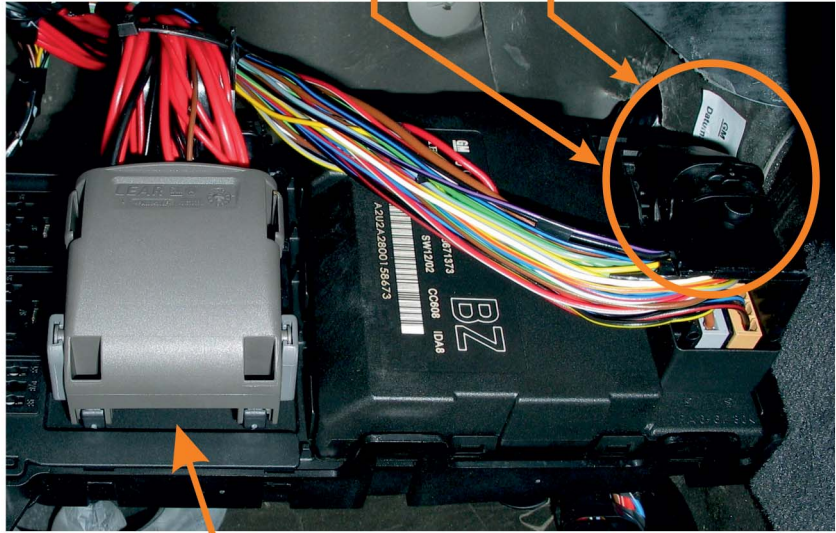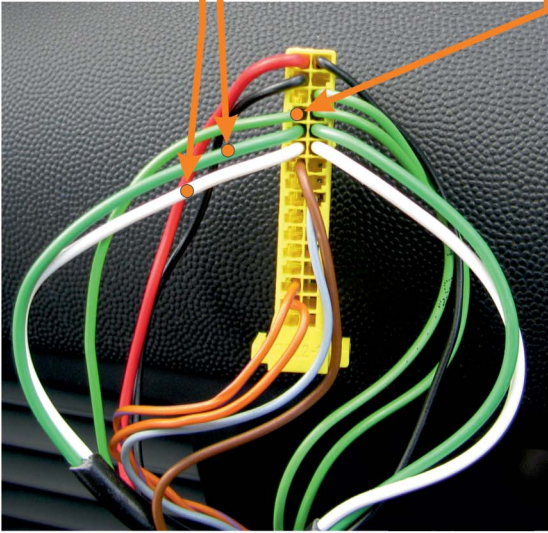

**CONTROLLER MODULE**



**Additional information:**  
**+12V** - red pin15 grey connector 42PIN  
**IGNITION SWITCH** - black pin11 grey connector 42PIN

